



- 1 Drill a hole (23) in the center console (13) as per the dimensions.

- 23 20 mm diameter
A 22 mm
B 20 mm

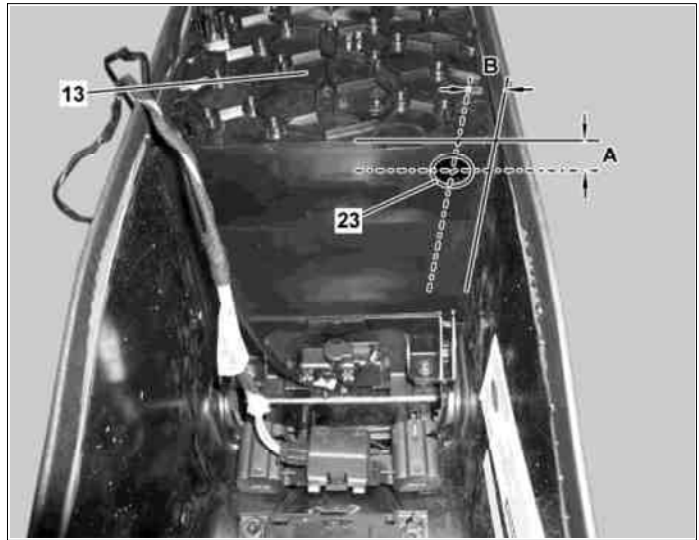


P82.60-5338-11

- 1 iPod wiring harness
2 iPod connector+
5 Coupling for interface
6 Grommet

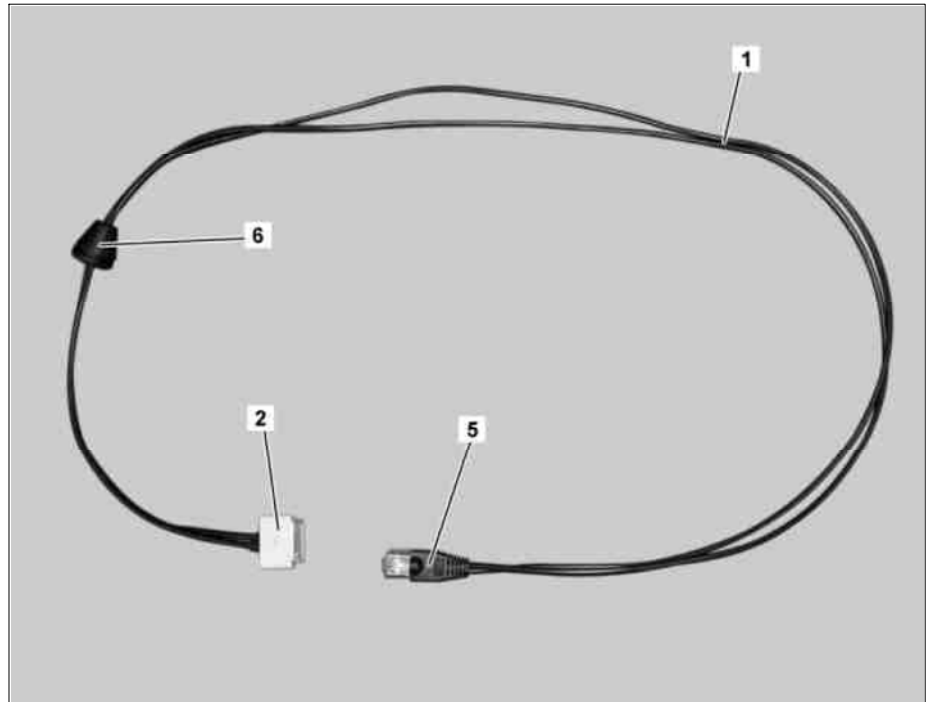

P82.60-5339-06

- 3 Slide coupling for interface (5) of iPod wiring harness (1) from the inside out of center console (13) through the drilled hole (see arrow).

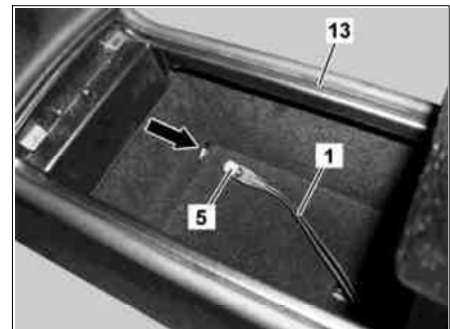

P82.60-5340-01

4 Close hole with grommet (6) of iPod wiring harness (1).

i The iPod coupling (2) of the iPod wiring harness (1) will be connected to the iPod at a later point in time.


5 Unscrew nut (25).

6 Place center console (13) onto center tunnel.

7 Lift up front center console (26) until the coupling for interface (5) can be pushed through between the center tunnel and the front center console (26).

8 Fasten center console (13) on center tunnel.

⚠ Do not pinch and damage retrofitted iPod wiring harness (1) with the center console (13).

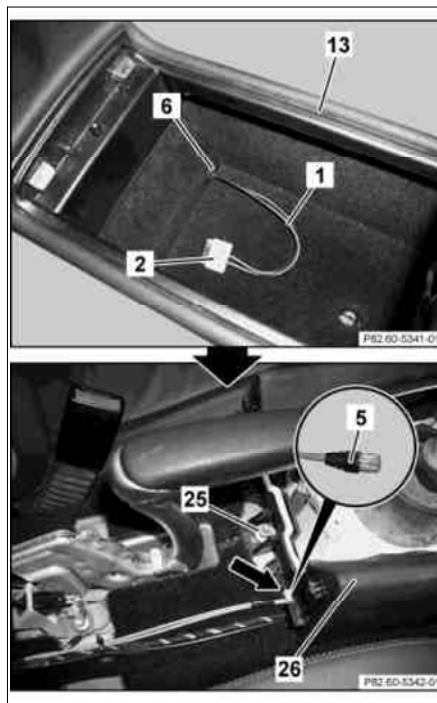


P82.60-5343-03

9 Route iPod wiring harness (1) as per the picture between the front center console (26) and the shift block (27), and secure in place using cable tie.

i The interface connector (5) can be connected to the iPod interface later.

Illustrated with removed rear center console

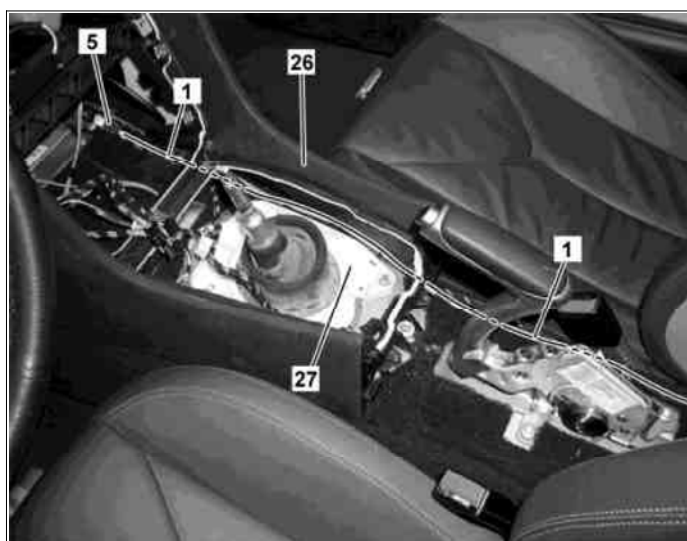

P82.60-5344-11